


# Two-way movement mechanism for Anta 5


# MAIN CHARACTERISTICS:

- It can be used on all Eurogroove profiles;
- Extremely small dimensions;
- It adapts perfectly to different rebate heights;
- It can be used with both traditional and Ribanta 5 rods;
- Very sturdy fixing;
- Suited for all snap-latches with 7-mm square
- 15-mm two-way travel.

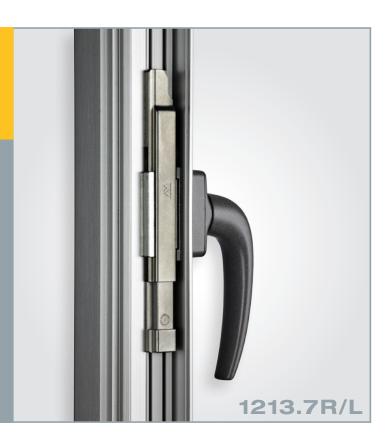

## **TECHNICAL DRAWINGS**



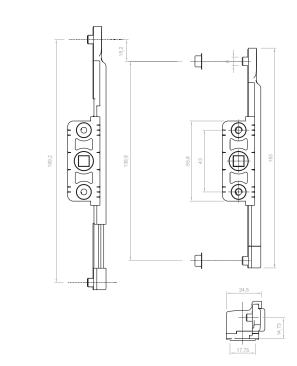


ARTICLE	NAME	DESCRIPTION	STANDARD FINISHES	PCS./ PACK.
1213/7R		Right side two-way movement for the Anta 5 system, 7-mm square		20
1213/7L		Left side two-way movement for the Anta 5 system, 7-mm square		20
1212.705		Carrying device		40



Two-way movement mechanism for Anta 5

1213.7R/L

#### **MACHINING**

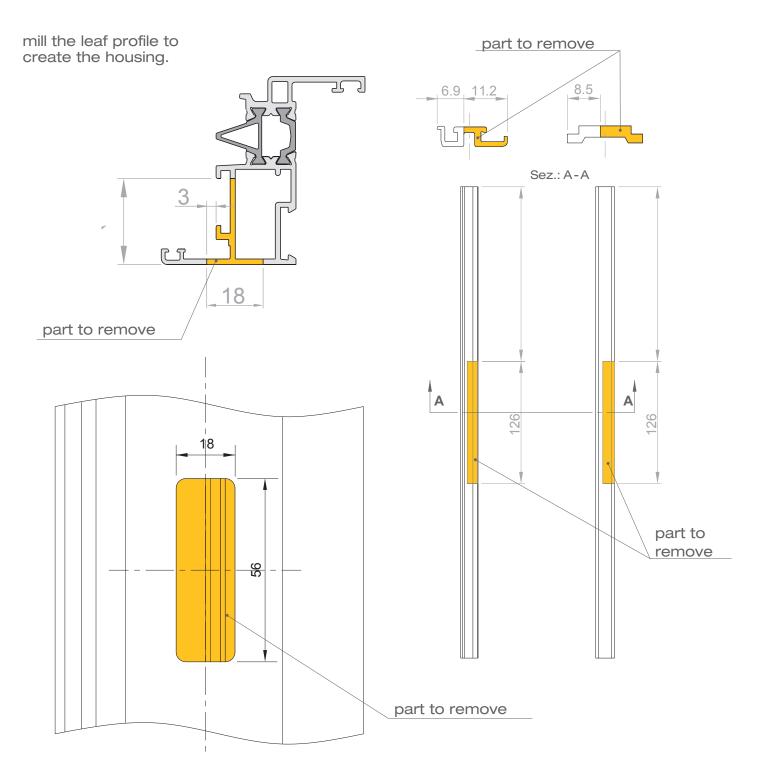




Two-way movement mechanism for Anta 5

1213.7R/L

#### ASSEMBLY WITH CUT AND DRILLED ROD

The two-way access device can be used with both traditional rod and with Ribanta 5 rod.

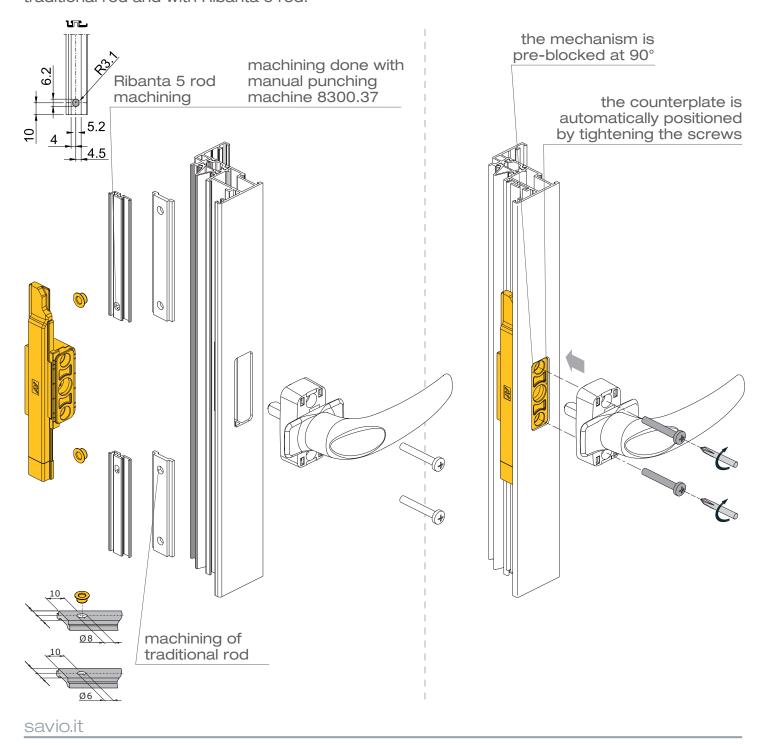



Two-way movement mechanism for Anta 5

1213.7R/L

### **CARRYING DEVICE**

To carry frames with no snap-latch, a specific device was developed that, once screwed in, keeps everything in place until the permanent assembly with the snap-latch.

